

# SLOPE INSTALLATION GUIDE

**Futerra® F4 Netless® Application: Use with Round Top Biodegradable Pins and Metal Pins for best installation.**

## SITE PREPARATION

STEP 1. Remove all rocks and debris > 2" in diameter.


STEP 2. Prepare soil surface, apply seed and soil amendments according to project specifications.

## APPLY UNROLLED SIDE UP

STEP 1. Start unrolling roll of Futerra® F4 Netless® 1-2' above the slope crest.

STEP 2. Anchor top of blanket on 1' centers.

STEP 3. Apply pins or staples along blanket length, one every 2 ½ linear feet. Place pin or staple every 5' down center of blanket, creating an X pattern with anchoring system.

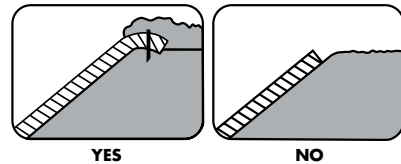

## FOLLOW DIAGRAM TO COMPLETE INSTALLATION STEPS

### OPTIONS:

- Slope crest trenching may be specified on some projects. Top edge width of Futerra F4 Netless should then be stapled or staked in the trench bottom. Backfill and compact soil.
- Futerra F4 Netless can be applied horizontally on shallow slopes. Begin first roll 1-2' above crest of slope.
- Continue with steps #4, #2 (above) and #5 last.

### CAUTION NOTES:

- Futerra F4 Netless bonding process begins with soil contact. If repositioning is needed, simply lift blanket up from surface or re-roll uphill toward re-position point.
- Minimize foot traffic on blanket following installation.
- Futerra F4 Netless is designed for fine turf installations that are under irrigation. Do not install along areas subject to high velocity winds (35 miles per hour).

